CEMSTONE





COLD WEATHER CONCRETE



CEMSTONE.COM | 800-CEMSTONE

Why You Need a Cold Weather Plan:

The American Concrete Institute (ACI) 306R-16, "Guide to Cold Weather Concreting" states that cold weather concreting exists when the air temperature has fallen to or is expected to fall **below 40°F** during the protection period. It also defines the protection period as the amount of time recommended to **prevent concrete from being adversely affected by exposure to cold weather** during construction.

The objectives of a cold weather protection plan are to:

- **Prevent damage to concrete** due to early-age freezing. Concrete can withstand a single cycle of freezing when it has obtained a compressive strength of 500 psi in a dry condition. At 50°F, most well-proportioned concrete mixtures reach this strength within 48 hours.
- Ensure that the concrete develops the required strength for safe removal of formwork and for safe loading of the structure.
- **Maintain curing conditions** without using water curing. During cold weather, water curing may reduce the resistance to freezing and thawing when protection is removed.
- Limit rapid temperature changes, particularly before the concrete has developed sufficient strength to withstand induced thermal stresses. Rapid cooling of concrete surfaces or large temperature differences between the exterior and interior can cause cracking and reduce the strength or durability of the concrete member.
- Provide protection consistent with the durability of the structure during its design life. Surfaces and corners must be protected from freezing, dehydration, and cracking from overheating due to inadequate protection, improper curing, or careless workmanship.



For more information on cold weather concreting practices or to purchase a copy of ACI 306R-16 visit **concrete.org.** Please contact your Cemstone Account Representative with questions or concerns on a mix design for your project, coarse aggregate selection and admixture packages.

Develop a Cold Weather Concreting Plan For Structural Concrete.



A cold weather plan is a team effort between Cemstone and the contractor. We each have responsibilities for executing the plan. Consider the items below:

- All formwork and subgrade should be free and clear of snow and ice. The temperature difference of the subgrade and fresh concrete should not be greater than 20°F.
- When temperatures are below 10°F, metallic embeds should be warmed prior to
 placement. Embeds with a cross-section 4 in² or greater should be warmed to at least 32°F.
 A heated enclosure or insulated concrete curing blankets may need to be used before the
 concrete is placed.
- The air temperature on the placement day must be determined. **Table 1 (below)** provides recommended concrete temperatures, based on the air temperature and member size.

TABLE 1: RECOMMENDED CONCRETE TEMPERATURE					
		Section size, minimum dimension			
		<12"	12" to 36"		
Line	Air temperature	Minimum concrete temperature as placed and maintained			
1	-	55°F	50°F		
Line	Air temperature	Minimum concrete temperature as mixed for the indicated air temperature*			
2	Above 30°F	60°F	55°F		
3	0°F to 30°F	65°F	60°F		
4	Below 0°F	70°F	65°F		
Line	Air temperature	Maximum allowable gradual temperature drop in first 24 hours after end of protection			
5	-	50°F	40°F		

Concrete placed in cold weather conditions must be protected using a heated enclosure or insulating blankets. **Table 2 (below)** provides the recommended length of the protection period based on the use and exposure condition of the concrete member.

TABLE 2: PROTECTION PERIOD FOR CONCRETE PLACED DURING COLD WEATHER				
Protection period at a minimum temperature indicated in Line 1 of Table 1* (above)				
Service condition	Normal set condition, days	Accelerated set concrete, days		
No load, not exposed	2	1		
No load, exposed	3	2		
Partial load, exposed	6	4		
Full load Refer to Chapter 8 of ACI 306R-16		er 8 of ACI 306R-16		

Please note the following for cold weather protection:

- Heated enclosures should be waterproof and strong enough to withstand anticipated wind and snow loads.
- Ensure corners and edges are sealed.
- Combustion heaters should be vented to avoid exposing surfaces to carbon dioxide (CO₂).
 Concrete exposed to CO₂ early during the curing process can exhibit carbonation, crazing or dusting.
- The concrete surface temperature should be monitored during the protection period to ensure that adequate protection is being provided.
- Consider using concrete maturity to determine the in-situ compressive strength and to aid in removing the protection.
- Curing is a critical procedure aimed at enhancing the surface durability and lifespan of concrete flatwork. ACI 308 Guide to External Curing of Concrete describes curing as an action taken to maintain moisture and temperature conditions of freshly placed concrete.

Note 1: For Line 1, maximum placement temperature is minimum temperature in the table plus 20 °F.


Note 2: For Lines 2-4, maximum temperature is minimum temperature in the table plus 15°F.

Note 3: For larger section sizes, consult Table 5.1 of ACI 306R-16.

Ref. Table 5.1 ACI 306R-16

^{*}The contractor is responsible for informing Cemstone dispatch if higher concrete delivery temperatures are needed. Additional costs may apply. For colder weather, a greater margin in temperature is provided between concrete as mixed and required minimum temperature of fresh concrete in place

Insulated Curing Blankets

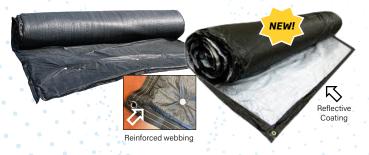

Premium Winter Curing Blanket (no refective coating) Item# 9329832

NEW!6'x25'Insulated Concrete Blanket with Reflective Coating Item# 9387860

Request a quote for volume discounts

Cold Weather Application







50 lb Rapid Strength Construction Grout LT Item# 114103

50 lb Critical Pavement Repair Item# 113091

9.5 fl oz at-3G High-Strength Hybrid Acrylic Adhesive Item# 9383821

Snow Tarp & Slip Prevention



20' x 20' 8 Point Snow Tarp Call for details

Tube Sand Item# 106610

25 lb bag Traction Grit Item# 105248

2,000 lb Traction Grit Special Order

Chapin® Spreader Item# 9370520

Cold Weather Heating Solutions



R Series Nu-Way Torch Item# 9329272

AC Series NU-WAY Torch Item# 9329270

6 mil Reinforced Poly Sheeting Stocked in sizes 10, 12, 16, 20, 24, 32, 40 and 60' wide by 100' long.

Tradesman 170 Ultra Heater Item# 9367430

Norseman 250 Heater Item# 9333540

Tradesman 400 Ultra Heater Item# 9333539

Cold Weather Apparel



A. Full Zip Black Bottom Ripstop Soft Shell Jacket Size M-4XL

B. Zip Front Black Bottom Hoodie

Size S-5XL

ZXT BUCKLE OVERSHOE Size 6-17 Available at Eagan location only.

MaxiFlex Ultimate Gloves Size M-3XL

PowerGrab Thermo Gloves Size M-2XL

Recommendations for placing concrete in cold weather conditions.

CONCRETE MIXTURES

- The water-cementitious materials ratio (w/cm) should not exceed the recommendations within ACI 201.2R-16. All concrete that is subjected to freeze-thaw cycles while saturated in service should have a w/cm ratio no greater than 0.45.
- Use accelerating admixtures to increase the rate of hydration. Do not use calcium chloride (CaCl₂) accelerators or admixtures containing CaCl₂ for concrete with reinforcing steel as this can lead to corrosion. CaCl₂ admixtures may also darken the concrete color.
- Accelerating admixtures are not anti-freezing agents.
- Limit the use of supplementary cementing materials such as fly ash and slag, when early strength development is required.

SLAB FINISHING

- It is recommended to use air-entrained concrete for saturated members that will be exposed
 to freeze-thaw cycles during construction, even if the member is not expected to be exposed
 to freeze-thaw cycles while in service.
- Avoid hard-trowel finishing air-entrained concrete greater than 3%. This can lead to surface blistering or other surface defects. Air-entrained concrete should not be specified for hardtrowel slab construction.

Curing is a critical procedure.

Proper curing techniques are essential to shield freshly finished concrete from adverse environmental factors such as low humidity, drying winds, and drastic temperature fluctuations. Improper curing may cause shrinkage cracking, scaling, mortar flaking, and other surface defects. Select the most suitable curing method for the weather conditions, specific application, and intended use of the concrete.

- Upon completion of finishing, concrete should be protected from drying, and evaporation
 of moisture should be prevented. Since fresh concrete is critically saturated, a drying period
 must occur after curing and before the concrete is exposed to freezing temperatures.
- Additional curing is generally not needed after protection is removed so long as the air temperature remains below 50°F and the relative humidity is above 40%.

The benefits of properly cured concrete are significant.

- Maximized Hydration Process: Proper curing leads to improved strength and abrasion resistance. Adequate moisture retention during curing ensures optimal cement hydration, resulting in a denser and stronger concrete matrix.
- Enhanced Durability and Service Life: By maintaining adequate moisture levels, curing minimizes the risk of surface deterioration and surface degradation over time. This results in concrete that withstands environmental stresses.
- Decreased Permeability: Curing is crucial for enhancing concretes resistance to water penetration and chemical ingress.
- Surface Defect Prevention: By preventing rapid moisture loss and temperature differentials, proper curing significantly reduces the potential for surface defects such as scaling and mortar flaking.

COLD WEATHER TIPS FOR STRUCTURAL CONCRETE

Properly air-entrained exterior structural concrete should not be subjected to multiple freezing and thawing cycles in a saturated condition before developing a **COMPRESSIVE STRENGTH OF 3,500 psi.** If surface defects are a concern, a compressive strength of 4,500 psi needs to be achieved.

FROZEN SUBGRADE can cause the concrete to freeze as well as cause finishing and durability issues. The subgrade should be free of snow and ice and have a temperature no greater than 20°F cooler than the concrete being placed.

MINIMIZE RAPID TEMPERATURE CHANGES, particularly before the concrete has developed sufficient strength to withstand thermal stresses, which can cause cracking. Gradually remove insulation and other protection methods so that the concrete surface temperature decreases no more than 50°F for concrete 12" or less in thickness in a 24 hour period.

The use of **HIGH EARLY STRENGTH CONCRETE OR ACCELERATING CHEMICAL ADMIXTURES** is recommended during cooler temperatures to increase the speed of hydration and mitigate free water within the concrete from freezing. Avoid using calcium chloride as an accelerator if the concrete contains steel reinforcement. Accelerating admixtures must not be used as a substitute for proper curing and frost protection.

TEST CYLINDERS for normal strength concrete must be cured at an initial curing temperature of 60 to 80°F. Cure boxes, blankets or other curing methods must be used in order to comply with ASTM specifications. ASTM C31 also requires that cylinders must be initially cured in an environment free of evaporation and be stored for no longer than 48 hours prior to being taken to the laboratory for final curing and testing.

To keep your project on schedule, consider using **concrete maturity** to determine the in-place concrete strength in lieu of field cure cylinders. Concrete maturity is the relationship between concrete temperature, time, and strength gain. It is measured through the use of in-place sensors.

<u>**DO NOT**</u> **USE UNVENTED HEATERS.** Carbon dioxide from unvented fossil fuel heaters can cause carbonation of the concrete. Carbonation can result in craze cracking and a soft, chalky surface that will dust under traffic.

Allow ample time for **BLEED WATER** to dissipate before concrete finishing. Trapping or finishing bleed water into the concrete can cause higher water cementitious materials ratios at the surface and may lead to scaling and/or blistering.

PROPER CURING procedures must be followed immediately after finishing is completed. This includes maintaining proper moisture and temperature conditions.

MONITOR CONCRETE TEMPERATURES at concrete corners and edges which are vulnerable to freezing as temperatures are usually more difficult to maintain in these locations.